




# **187344 ORIGAMI SMOKE**

9mm 25x25 cm./9.8x9.8in. • M941

**Información Técnica /** Technical Information

Icono	Prueba	Norma	Resultado	
L	DIMENSIONS	UNE EN ISO 10545-2	± 0,5%	
٩	WATER ABSORPTION	UNE EN ISO 10545-3	E > 10%	
Д	CHEMICAL RESISTANCE	UNE EN ISO 10545-13	GLA	
	FLATNESS	UNE EN ISO 10545-2	± 0,5%	
	SCRATCH HARDNESS	UNE EN 67-101	4	
<b>y</b>	CRAZING RESISTANCE	UNE EN ISO 10545-11	CUMPLE / ACCOMPLISH	
*	RESISTANCE TO STAINS	UNE EN ISO 10545-14	5	



Uso	<b>s /</b> Use	es							
→	+	F	¢	<b>8 8 8 8 8 8 8 8 8 8</b>					
NO	NO	$\checkmark$	NO	NO	NO	NO	$\checkmark$	NO	$\checkmark$

C = CONSULTAR / CONSULT

#### Características

lcono embalaje



Grado destonificación Shade variation



Matt finish



Textura irregular Irregular texture

$m^2$	Pieza/m2 Piece/sqm		<b>Piezas/caja</b> Pieces/box	Kg	<b>Kg/caja</b> Kg/box	Lbs	Libras/caja Lbs/box
-	Cajas/pallet Boxes/pallet	m <sup>2</sup>	<b>M2/caja</b> sqm/box	^	M2/pallet Sqm/pallet		
lcono	os usos						
<b>→</b>	Outdoor walls Outdoor walls	ŧ	Outdoor floors Outdoor floors	F	Indoor walls Indoor walls	¢	Indoor floors Indoor floors
<b>** **</b> <b>** **</b>	Commercial flooring Commercial flooring		Underfloor heating installation Underfloor heating installation		Shower floor Shower floor		Shower wall Shower wall
	Swimming pool. Wall and floor (depth>1,5m) Swimming pool. Wall and floor (depth>1,5m)		Walls high vapor condensation areas Walls high vapor condensation areas				

#### ATTENTION

Carefully follow these instructions to ensure correct installation.

- Installation should be carried out by a qualified professional.
- Before installing ensure that the material is in perfect condition. Make sure you check the colours, finishes and thicknesses because DUNE will not accept any claims or returns of material after it has been installed.
- Before each stage, on one part test all of the materials and tools to be used and evaluate the final finish of the test. Should you fail to achieve the desired results do not continue with the installation, and consult our sales team.
- In public places materials must comply with the slipperiness requirements of the Spanish Technical Building Code.
- This document is purely commercial and may not be used in any legal or administrative proceedings, neither as an expert opinion nor as documentary evidence, unless expressly authorized by DUNE CERÁMICA S.L.

# FLOOR AND WALL TILES – CERAMIC

#### **1. PROPER PREPARATION OF SURFACE**

The wall must be firm, levelled, dry and clean. Uneven surfaces greater than 2 mm must be levelled with specific products. All cracks and imperfections should be repaired, so that the wall is completely smooth. The moisture content of the surface must be under 2%.

#### 2. INSTALLATION MATERIAL

For a correct installation, several factors must be taken into account: Material kind of the wall to be tiled (synthetic pannels, plaster, wood, etc.), wall stability, environmental conditions, kind of surface to be covered, speed of carrying the work, etc. All the above parameters determine the choice of the adhesive kind.

All the adhesive materials recommended by DUNE have been previously tested in our facilities, in controlled environmental conditions and on rigid brick and/or concrete walls. Under different conditions from the above mentioned, it is recommended to test firstly and if in doubt, please contact DUNE or the adhesive distributor.

White and Red body wall tile: C1 concrete glue. (Consult adhesives table). Stoneware and porcelain tile: C2 concrete glue. (Consult adhesives table).

DUNE always recommends to test first the material with minimum two pieces before placing all the material.


## **3. INSTALLATION**

We recommend starting the installation from the floor to the ceiling, continue in phase to allow the adhesive the necessary time to get dry. Extend a thin layer of adhesive on to the surface where the piece will be installed (3mm approx.) Then, use a notched trowel no. 3 to make incisions into the adhesive layer. Place the piece while the adhesive is still soft and before a dry layer of film forms on the adhesive surface. To install  $30 \times 60$  pieces or similar, extend a thin layer of adhesive on the surface where the piece will be installed (vertically) and another layer on the back of the piece itself, in the opposite sense (horizontally). Then, use also a notched trowel no. 3 and make the incisions into both the adhesive layer of the wall and in the opposite sense in the piece. Do not use dot setting or dab the adhesive during installation.


Once the piece is placed, press carefully to obtain correct adhesion and cover possible areas without adhesive. For a better fixing, it is recommended to set the pieces by using some tape or a wooden strip. To correct the position of the bases, it is recommended to take them off and correctly clean their back part before placing them again.


We recommend a minimum joint of 2mm and the use of crosspieces. For areas with severe thermal dilatation or non-stable surfaces (plasterboard), a minimum joint of 3 mm is strongly recommended.


DUNE recommends the use of SELF-LEVELING SPACERS to avoid the appearance of lippage between adjacent pieces.

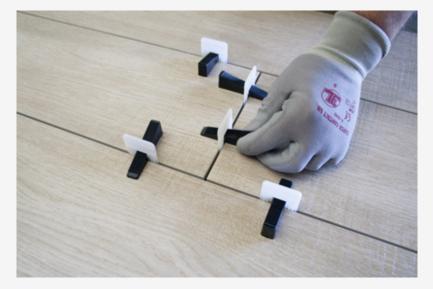

The placement of a locked joint greater than 25% is not recommended to avoid the appearance of uneven or lippage between adjacent pieces. Claims of material placed on a locked joint greater than 25% will not be accepted.

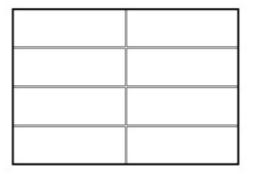

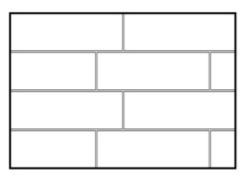

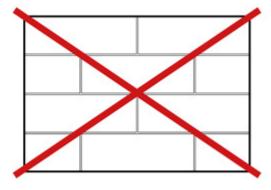

Models manufactured with LUX resin components should not be installed in areas close to a heat source, such as behind radiators, in saunas, near burners, etc.

### 4. GROUTING

All joints must be perfectly clean and dry and having a minimum depth of 2mm. Use a flat rubber trowel to spread the paste, being sure that the joints are completely covered. Use a wet sponge or neutral PH products – never abrasive products – to wash off immediately the excess of grouting paste from the surface before it dries.

It is very important to do this before the paste dries. If this happens, use a cement remover to clean the surface

For better waterproofing, it is necessary to use an epoxy grouting paste, especially in water areas

Items decorated by pre-cuts, so that it is recommended to follow the lines of those pre-cuts in order to get a correct finish. Make sure that the distance between one sheet and another is the same as the one of pre-cuts, so that all the joints look alike. It is essential to completely grout the pieces to cover the pre-cuts.

Consult the grouting materials table.

Important: The colour of the grouting paste might change the product's appearance. We recommend to test with some pieces before grouting the entire surface.

### 5. CLEANING AND MAINTENANCE

For everyday cleaning, use regular cleaners with PH neutral. Do not use abrasive products.

PVD AND DELICATED PRODUCTS: Avoid using abrasive and anti-lime cleaners or steel wool. Preferably use pH neutral cleaning products.

Tabla de adhesivos / Adhesives Table					
	Cemento cola C1	Cemento cola C2	Adhesivo epoxidico		
	C1 concrete glue	C2 concrete glue	Epozi adhesive		
KERAKOLL	ESPECIAL ECO	H 40 ECO FLEX	SUPERFLEX ECO		
MAPEI	TIXOBOND	KERAFLEX MAXI S-1	KERALASTIC T		
	Mortero adhesivo látex				
	Latex adhesive mortar				
LATICRETE	Mortar 211				
	+ Laticrete 4237				

Productos de tratamiento / Tratment products					
	Código	Descripción	Código PHP recomendado		
	Code	Description	Recommended retail price		
<b>CRISTAL</b> GLASS	185463	ANTIGLISS	D787		
PIEDRA	184507	CERA LIQUIDA PROTECTORA LIQUID PROTECTIVE WAX	D945		
STONE	184508	SELLADOR ANTIMANCHAS STAIN-PROF SEALER	D969		

Tabla de pastas de rejuntar / Grouting pastes table				
	Pasta de rejuntar cementosa Cement grouting material	Pasta de rejuntar epoxi Epoxy grouting material		
KERAKOLL	FUGABELLA ECO PORCELANA	FUGALITE		
MAPEI	KERACOLOR FF	KERAPOXY		
LATICRETE	LATICCRETE serie 1600	-		

